

# KARMA

## MUSIC WORKSTATION

## Quick Tour

### Listen to the Factory Demo Songs:

- Press the [SEQ] key ➤ Press the [F1] key (below the display), then press the [▲ or ▼] Cursor key (below the Dial), to highlight the song name field (“000: Planet KARMA”, “001: K Logik” etc.) ➤ Select a desired song using the [▲ or ▼] keys to the left of the display ➤ Press the [START/STOP] key (in the SEQUENCER control section) to begin playback ➤ Press the [START/STOP] key again to stop playback.

### Select and play Programs or Combinations:

- Press the [COMBI] or [PROG] key (to the left of the display) to select either Combinations or Programs ➤ Press one of the PROGRAM Bank [A, B, E, F or G] keys, or COMBI Bank [A, B or E] keys (upper right section of the front panel). *Note that the C, D and F banks do not contain Programs or Combis in this demo unit.* ➤ Use the [▲ or ▼] keys, the numeric keypad, or the [DIAL] to select and play sounds from each bank.

### Try out the Realtime Controllers:

*As you play, try working with the Realtime Control knobs, Joystick and Switches 1&2 (far-left of the front panel). They're all programmable for every sound, and just like the KARMA controls, any changes you make to these controllers can be recorded into the Sequencer!*

### Select and play Programs or Combinations by Category:

- Press the [PROG] or [COMBI] key ➤ Press the [F8] key below “UTILITY” in the display, then press the [▼]Cursor key to highlight “Select by Category” in the Popup menu ➤ Press the [F8] key below “OK” ➤ Use the [▲ or ▼] keys (left of the display) to select a sound category, then press the [▲ or ▼] Cursor keys to move to and play selected sounds.
- To return to the main Play Mode page for Programs or Combinations, press the [F7] “Cancel” or [F8] “OK” key below the display.

*TIP: Make sure to try the CHORD TRIGGER KEYS when selecting Programs and Combinations!*

### Exploring the KARMA function in Programs and Combinations:

- While in either Program or Combination mode, press the [F5] key (K.RTC) below the display.
- Confirm that the KARMA ON/OFF key is on/lit (it's located near the Volume Slider).
- Try the four CHORD TRIGGER keys.
- Turn one of the eight REALTIME CONTROL knobs; The display shows the parameters you can control.
- Press the [SCENE] key to hear another pre-programmed setting of these controllers.
- Try varying the knobs and switches. Select different Programs and Combinations. Enjoy!

*To return a knob to its original value, hold the [ENTER] key and rotate the knob.*

*To return a Scene to its original status, hold the [ENTER] key and press the [SCENE] key.*