



English

Errata

Please note the following revisions to the User's Guides of the applicable musical instrument models.

1. Correction		
Applicable Model(s)	AP-450	PX-850
Page	E-15	E-15
Title/Location	"Recorded Data"	
Description	Current <ul style="list-style-type: none">• Temperament and base note settings (Track 1 only)	
	Corrected <ul style="list-style-type: none">• Temperament and base note settings (Track 1 only) <u>are not recorded.</u>	
2. Addition		
Applicable Model(s)	AP-450	PX-850
Page	E-18, E-27	E-18, E-27
Title/Location	"Recording Digital Piano Play (Audio Recorder)" / Step 1, "Connecting a USB Flash Drive to and Detaching It from the Digital Piano" / IMPORTANT!	
Description	<ul style="list-style-type: none">• When you plug in a USB flash drive, the Digital Piano initially needs to "mount" the USB flash drive and prepare for data exchange. Note that Digital Piano operations are momentarily disabled while a USB flash drive mounting sequence is being performed. The Digital Piano's L/R lamps flash while the mounting process is in progress. It may take up to 10 or 20 seconds or even longer for a USB flash drive to be mounted. Do not attempt to perform any operation on the Digital Piano while a mounting sequence is in progress (while L/R lamps are flashing). A USB flash drive needs to be mounted each time it is connected to the Digital Piano.	
3. Correction		
Applicable Model(s)	AP-450	PX-850
Page	E-14, E-18, E-19, E-20	E-14, E-18, E-19, E-20
Title/Location	"Playing Back Audio Data Stored on a USB Flash Drive" / Step 1, "Recording Digital Piano Play (Audio Recorder)" / Step 2, "Recording Digital Piano Play as Data Recorded in Song Memory Plays Back (Audio Recorder)" / Step 1, "Playing Back Data Recorded on a USB Flash Drive" / Step 1, "Deleting an Audio File from a USB Flash Drive" / Step 1	
Description	Current <ul style="list-style-type: none">• Press the AUDIO RECORDER button.	
	Corrected <ul style="list-style-type: none">• Press the AUDIO RECORDER button. <u>Note that you should press the button and immediately release it. Do not hold it down.</u>	
4. Correction		
Applicable Model(s)	AP-450	PX-850
Page	E-19	E-19
Title/Location	"Recording Digital Piano Play (Audio Recorder)" / Step 5, "Recording Digital Piano Play as Data Recorded in Song Memory Plays Back (Audio Recorder)" / Step 4	
Description	Current <ul style="list-style-type: none">• The two SONG ►/■ button lamps will flash four times to let you know that audio recording is complete.	
	Corrected <ul style="list-style-type: none">• The two SONG ►/■ button lamps will flash <u>together three or four times</u> to let you know that audio recording is complete. If you want to continue recording, perform the operations from step 4 under "Recording Digital Piano Play (Audio Recorder)" (page E-18). If you want to play back what you recorded, perform the operations from step 3 under "Playing Back Data Recorded on a USB Flash Drive" (page E-19). To exit the audio record/playback operation, press the <u>AUDIO RECORDER button.</u>	
5. Correction		
Applicable Model(s)	AP-450	PX-850
Page	E-19	E-19
Title/Location	"Playing Back Data Recorded on a USB Flash Drive" / Step 3	
Description	Current <ul style="list-style-type: none">• Press the AUDIO RECORDER button and SONG ►/■ button at the same time.	
	Corrected <ul style="list-style-type: none">• <u>While holding down the AUDIO RECORDER button, press the SONG ►/■ button.</u>	
6. Correction		
Applicable Model(s)	AP-450	PX-850
Page	E-28	E-28
Title/Location	"Formatting a USB Flash Drive" / Step 4	
Description	Current <ul style="list-style-type: none">• When formatting is complete, the L/R lamps will go out to indicate that the USB flash drive mode has been exited.	
	Corrected <ul style="list-style-type: none">• <u>After</u> formatting is complete, the L/R lamps will <u>light</u> and the Digital Piano will exit the formatting operation.	